


Eggcrate Return Filter Grille

Instructions for Inserting Filter & Removal of Eggcrate Face for Cleaning



Commercial
Dishwasher
Safe!

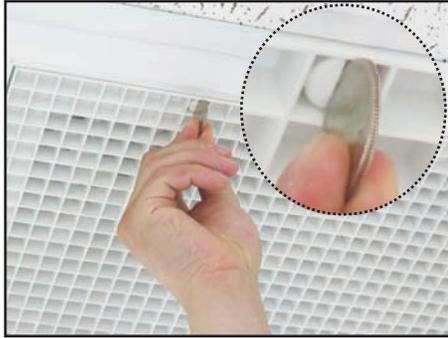

Use coin or screw driver to turn the two plastic screw heads and release the eggcrate return face



Eggcrate face will hang down on hinges. You can lift off and remove face for cleaning. If inserting or replacing filter leave hanging.



Slide 1" thick filter onto eggcrate face, sliding through filter clips...



Push filter past the closure knobs.



Lift face up and close. Secure by turning the two plastic screw heads with a coin or screw driver.

For best results use an Industry Standard 20" x 20" x 1" filter, measuring 19.5" x 19.5" x 7/8" or less



AMERICAN LOUVER COMPANY®
AmericanLouver.com

part #8218